
 



 

 

 


 

 



 

 



 


 
 
 
 
 
 




 
 

 



 

 

 

 





 















Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
On/Off		Power	
Mute		Mute	
Update		Media	
Reveal		Smart	
Txt Stop		Stop	
Subt.List		Subt	
Sleep Timer		Sleep	
Return TV		TV/R	
Menu video		D. Menu	
Text		Text	
Txt Expand		Eject	
TV/AV		AV	
Menu		Menu	
Menu Up		Up	
Display		Info	
Menu Left		Left	
OK Enter		Ok	
Menu Right		Right	
Menu Off		Exit	
Menu Down		Down	
Back		Back	
Volume+		Vol +	
Chan.Up		Ch +	
Volume-		Vol -	
Menu audio		Dual	
Chan.Down		Ch -	
1		1	
2		2	
3		3	
4		4	
5		5	
6		6	
7		7	
8		8	





 
 
 


 

 
 
 

 
 



Originalfernbedienung Ersatzfernbedienung

On/Off		Power
Audio Off		Mute
Slow Down		I <<
Subt.		Subt
Auto/Track		Green
Slow Up		>> I
Rep/A-B	 + 	Shift + Text
Stop		Stop
Title		List
Zoom	 + 	Shift + Eject
Repeat/1/All		Text
Pause		Pause
DVD/TV		AV
Menu		Menu
Menu Up		Up
Display		Info
Menu Left		Left

Originalfernbedienung Ersatzfernbedienung

OK Enter		Ok
Return		Back
Menu Right		Right
Menu Down		Down
Volume+		Vol +
Progr.		Sleep
Next		Ch +
Volume-		Vol -
Top Menu		D. Menu
Prev.		Ch -
1		1
2		2
3		3
4		4
5		5
6		6
7		7



Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
8		Setup	 Options
9		3D	 3D
+10			
EQ			
0			
C/CH			
Digest			
Record			
Open/Close			
Mode			
Angle			
Rewind			
Play			
Clear/00:00			
Audio			
F.Forward			
NTSC/PAL	