
 





 
 
 


 
 




 








 


 




 

 








 








Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
On/Off		Power	
Mute		Mute	
Update		Media	
Reveal		Smart	
Txt Stop		Stop	
Subt.List		Subt	
Sleep Timer		Sleep	
Return TV		TV/R	
Menu video		D. Menu	
Text		Text	
Txt Expand		Eject	
TV/AV		AV	
Menu		Menu	
Menu Up		Up	
Display		Info	
Menu Left		Left	
OK Enter		Ok	
Menu Right		Right	
Menu Off		Exit	
Menu Down		Down	
Back		Back	
Volume+		Vol +	
Chan.Up		Ch +	
Volume-		Vol -	
Menu audio		Dual	
Chan.Down		Ch -	
1		1	
2		2	
3		3	
4		4	
5		5	
6		6	
7		7	
8		8	










 


 
 

 






 
 


 

 
 
 

 
 




 

**Originalfernbedienung Ersatzfernbedienung**

On/Off		Power
Audio Off		Mute
Slow Down		I <<
Subt.		Subt
Auto/Track		Green
Slow Up		>> I
Rep/A-B	 + 	Shift + Text
Stop		Stop
Title		List
Zoom	 + 	Shift + Eject
Repeat/1/All		Text
Pause		Pause
DVD/TV		AV
Menu		Menu
Menu Up		Up
Display		Info
Menu Left		Left

**Originalfernbedienung Ersatzfernbedienung**

OK Enter		Ok
Return		Back
Menu Right		Right
Menu Down		Down
Volume+		Vol +
Progr.		Sleep
Next		Ch +
Volume-		Vol -
Top Menu		D. Menu
Prev.		Ch -
1		1
2		2
3		3
4		4
5		5
6		6
7		7



Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
8		8	
9		9	
+10		Guide	
EQ		Media	
0		0	
C/CH		Pre Ch	
Digest		Red	
Record		Rec	
Open/Close		Eject	
Mode		Smart	
Angle		TV/R	
Rewind		<<	
Play		Play	
Clear/00:00		Exit	
Audio		Dual	
F.Forward		>>	
NTSC/PAL		Format	
Setup		Options	
3D		3D	

