


 

 
 




 








 

 




 








Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	AV		AV
	-/--		Guide
	TV TX		Text
	OK		Ok
	Up / CH+		Up




 

 





 


 

 

 



Originalfernbedienung Ersatzfernbedienung

	Up / CH+		Ch +
	Down / CH-		Down
	Down / CH-		Ch -
	Right / Vol+		Right
	Right / Vol+		Vol +
	Left / Vol-		Left
	Left / Vol-		Vol -
	[≡i]		Info
	Mix		Shift + Text
	Brightness		Shift + 1
	Contrast		Shift + 2
	Color		Shift + 3
	Menu		Menu
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue





**Originalfernbedienung**    **Ersatzfernbedienung**

	Stop		Stop
	Reveal		Play
	Update		Pause
	Clock		Options
	Sub		Subt
	Double		Dual
	Stereo A B		I<<<
	Stereo Sol		<<<
	Stereo Fa		>>>
	Stereo		>>>I
	Stereo PS		List

**Originalfernbedienung**    **Ersatzfernbedienung**