




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	Sleep		Sleep
	V-Format		Format
	F1		Shift + 1
	TV / SAT		Shift + TV/R
	USB		Media
	Find		Smart
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9

Originalfernbedienung Ersatzfernbedienung

	0 / Zoom		0
	0 / Zoom		Eject
	TV / Radio		TV/R
	Recall		Back
	Menu		Menu
	Info		Info
	Up		Up
	Right		Right
	Down		Down
	Left		Left
	OK		Ok
	Exit		Exit
	EPG		Guide
	Vol +		Vol +
	Vol -		Vol -
	Rec		Rec
	Page Up		Ch +



**Originalfernbedienung Ersatzfernbedienung**

	Page Down		Ch -
	Folder		Shift + Media
	Stop		Stop
	Play		Play
	Pause		Pause
	<< / Page -		<<
	>> / Page +		>>
	I<< Prev		I<<
	Next >>I		>>I
	Tms		List
	<I Step		Shift + Left
	Step I>		Shift + Right
	Play Mode		Shift + Play
	White		3D
	Red / Audio		Red
	Red / Audio		Dual
	Green / Option		Options

Originalfernbedienung Ersatzfernbedienung

	Green / Option		Green
	Yellow		Yellow
	Cyan		Blue
	Fav		Pre Ch
	SAT		AV
	TTX		Text
	Subtitle		Subt

