 



 

 

 
 
 

 

 

 

 


 






















 
 

 












Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	FAV		Pre Ch
	TXT		Text
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue

Originalfernbedienung Ersatzfernbedienung

	Guide		Guide
	?		Format
	Exit		Exit
	Menu		Menu
	Back		Back
	Tools		Options
	@		Smart
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Vol +		Vol +
	Vol -		Vol -
	Mute		Mute
	Source		AV
	P +		Ch +





**Originalfernbedienung    Ersatzfernbedienung**

	P -		Ch -
	I <		I <<
	>I / PIP		>>I
	<<		<<
	>>		>>
	Rec		Rec
	Play		Play
	Pause		Pause
	Stop		Stop
	3D		3D
	QO..		Dual
	[...]..		Subt
	Netflix		Shift + Media
	My Media		Media

**Originalfernbedienung    Ersatzfernbedienung**