


 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	DVD/TV		Shift + 2
	4		4
	5		5
	6		6
	[<>]/Zoom		Zoom / Size
	7		7
	8		8
	9		9
	-/--/Program		TV/Radio /
	0		0
	Mute		Mute / Dimmer
	i/Goto		Info / Angle
	Z/DVD Menu		Menu / Home

Originalfernbedienung Ersatzfernbedienung

	P+		Shift + CH+ /
	P+		CH+ / Page+
	-		Left
	OK		OK
	+		Right
	TXT/DVD Setup		Text / Goto
	P-		CH- / Page-
	P-		Shift + CH- /
	AV/Title		AV / Input / RDS
	Vol-		Vol-
	Vol+		Vol+
	SUB/ <<		<< / Tune-
	Update/ >>		>> / Tune+
	Red/Stop		Red / Netflix / Search
	Green/Play/Pause		Green / APP / Repeat
	Yellow/Play/Pause		Yellow / YouTube / Repeat
	Blue/ >>		Blue / Prime Video / Random

