 

 



 







 



 

 



 

 

 

 







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	FAV		Fav / Marker / PC
	0		0
	TXT		Text / Goto
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random

Originalfernbedienung Ersatzfernbedienung

	[<>]		Picture / Format
	?		Info / Angle
	CEC		Display / Media
	Menu		Menu / Home
	Up		Up
	←		Back / Return
	Left		Left
	OK		OK
	Right		Right
	Tools		Setup / OPT /
	Down		Down
	Guide		Guide / EPG / -/--
	Vol+		Vol+
	Source		AV / Input / RDS
	PR+		CH+ / Page+
	Vol-		Vol-
	Mute		Mute / Dimmer





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	PR-		CH- / Page-
	<		<< / Preset-
	>		>> / Preset+
	<<		<< / Tune-
	>>		>> / Tune+
	Rec		Rec / Rec Mode
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	Rec List		Smart / List
	Audio		Audio / Lang I/II
	Subtitle		Subtitle / EQ

