



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
FAV	FAV		Fav / Marker / PC
	0		0
TXT	TXT		Text / Goto
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random

Originalfernbedienung Ersatzfernbedienung

	Exit		Exit / Cancel / Clear
	?		D.Menu / Top
	@		Smart / List
	Menu		Menu / Home
	Up		Up
	Back		Back / Return
	Left		Left
OK	OK		OK
	Right		Right
TOOLS	Tools		Setup / OPT /
	Down		Down
GUIDE	Guide		Guide / EPG / -/--
	Vol+		Vol+
	Source		AV / Input / RDS
	P+		CH+ / Page+
	Vol-		Vol-
	Mute		Mute / Dimmer



