

























 











Originalfernbedienung Ersatzfernbedienung

	i		Info / Angle
	Power		Power
	Aa		Text / Goto
	Lang		Audio / Lang / I/I
	DVD		Shift + 2
	Open / Close		Eject / Surround
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Thumb Up		Display / Media
	0		0

Originalfernbedienung Ersatzfernbedienung

	Home		Shift + Menu /
	Home		Smart / List
	Back		Back / Return
	Menu		Menu / Home
	Zoom		Zoom / Size
	Option		Setup / OPT /
	Up / CH+		Up
	Up / CH+		CH+ / Page+
	Left		Left
	OK		OK
	Right		Right
	Down / CH-		Down
	Down / CH-		CH- / Page-
	Vol+		Vol+
	Mute		Mute / Dimmer
	DTV		TV/Radio /
	Vol-		Vol-



