
 

 

 



 

 



 

 



 


 
 

 


 


 




Originalfernbedienung Ersatzfernbedienung

	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	TIME		AV
	REPEAT		Text
	REPEAL A-B		TV/R
	DISPLAY		Info
	STOP		Stop
	PAUSE		Pause
	<<		<<

Originalfernbedienung Ersatzfernbedienung

	>>		>>
	PLAY/PAUSE		Play
	I<<		I<<
	>>I		>>I
	EJECT		Eject
	MUTE		Mute
	VOLUME+		Vol +
	VOLUME-		Vol -
	INPUT CD		Yellow
	INPUT TUNER		Green
	INPUT AUX		Red
	INPUT VIDEO		Blue
	INPUT TAPE 1		Guide
	INPUT TAPE 2		Pre Ch

