
















 

 



 



 

 








Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|---------------|---|---------------|
|  | Power |  | Power |
|  | Volume Up |  | Vol + |
|  | Volume Down |  | Vol - |
|  | Sleep |  | Sleep |
|  | Timer Standby |  | Shift + Power |
|  | Band |  | Green |
|  | Mono Tuner |  | TV/R |
|  | Mode Display |  | Info |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |




Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|---------------|---|---------|
|  | 0 |  | 0 |
|  | CD |  | Yellow |
|  | +10 |  | Guide |
|  | Tape |  | Blue |
|  | Video1/DAT |  | Smart |
|  | Video 2/AUX |  | Media |
|  | DSP |  | 3D |
|  | PRGM/Test |  | Menu |
|  | 1 |  | Back |
|  | Manual/Mode |  | Pre Ch |
|  | Mute |  | Mute |
|  | Volume Select |  | Dual |
|  | Up |  | Up |
|  | Down |  | Down |
|  | Right |  | Right |
|  | Left |  | Left |
|  | Direct |  | Options |




 
 

 




Originalfernbedienung Ersatzfernbedienung




 


 




| | | | |
|---|--------------------|---|-----------|
|  | Power |  | Power |
|  | Volume Up |  | Vol + |
|  | Volume Down |  | Vol - |
|  | Mute |  | Mute |
|  | Band |  | Green |
|  | CD |  | Yellow |
|  | Tape |  | Blue |
|  | Video1/DAT |  | Smart |
|  | Video2/AUX |  | Media |
|  | Repeat |  | Text |
|  | Random |  | AV |
|  | Disc Skip |  | Info |
|  | Disc Direct Play 1 |  | Shift + 1 |
|  | Disc Direct Play 2 |  | Shift + 2 |
|  | Disc Direct Play 3 |  | Shift + 3 |
|  | 1 |  | 1 |
|  | 2 |  | 2 |

Originalfernbedienung Ersatzfernbedienung


 





 

 

 

 
 


 
 
 
| | | | |
|---|--------------|---|--------|
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | +10 |  | Guide |
|  | PRGM CD |  | Menu |
|  | Play/Pause |  | Play |
|  | Stop/Clear |  | Stop |
|  | Search/Check |  | >> |
|  | I<< |  | I<< |
|  | Edit AI |  | Format |
|  | Edit PRGM |  | 3D |
|  | <> Deck 1 |  | Pause |




Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-------------|---|--------|
|  | Power |  | Power |
|  | Volume Up |  | Vol + |
|  | Volume Down |  | Vol - |
|  | Mute |  | Mute |
|  | Band |  | Green |
|  | CD |  | Yellow |
|  | Tape |  | Blue |
|  | Video1/DAT |  | Smart |
|  | Video2/AUX |  | Media |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------------|---|-------|
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | +10 |  | Guide |
|  | PRGM DAT |  | Menu |
|  | <> Deck 2 |  | Play |
|  | Stop Deck 2 |  | Stop |
|  | >> Deck 2 |  | >> |
|  | << Deck 2 |  | << |
|  | Rec/Rec Mute |  | Rec |
|  | Pause |  | Pause |

