



Originalfernbedienung Ersatzfernbedienung

	PP		Back / Return
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	P<P		Fav / Marker / PC
	0		0
	--		Guide / EPG / -/--
	Menu [M]		Menu / Home
	Info [i]		Info / Angle
	I-II		Audio / Lang I/II

Originalfernbedienung Ersatzfernbedienung

	Mute		Mute / Dimmer
	Left		Left
	Up		Up
	Right		Right
	OK		OK
	Down		Down
	V -		Vol-
	V +		Vol+
	P -		CH- / Page-
	P +		CH+ / Page+
	Red / Sound		Red / Netflix / Search
	Red / Sound		Sound / Title
	Green / Picture		Green / APP / Repeat
	Green / Picture		Picture / Format
	Yellow / Feature		Yellow / YouTube / Repeat
	Blue / Install		Blue / Prime Video / Random
	Text		Text / Goto





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
 [≡o]	 Sleep / Timer		
 Hold	 Stop / Hold		
 [≡X]	 Exit / Cancel / Clear		
 Mix / PIP Swap	 Smart / List		
 PIP / Size	 Zoom / Size		
 PIP Down / [≡?]	 I<< / Preset-		
 PIP Up / Index	 >>I / Preset+		
 [TV]	 TV/ Radio /		
 [AV]	 AV / Input / RDS		

