



 





 




 







Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|----------------|---|-----------------------|
|  | Power |  | Power |
|  | Program |  | TV/Radio / |
|  | Open/Close |  | Eject / Surround |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | +10 |  | Guide / EPG / -/-- |
|  | Play |  | Play / Slow |
|  | C |  | Exit / Cancel / Clear |
|  | I<< Skip/Frame |  | I<< / Preset- |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|----------------|---|------------------------|
|  | << Slow/Search |  | << / Tune- |
|  | Slow/Search >> |  | >> / Tune+ |
|  | Skip/Frame >>I |  | >>I / Preset+ |
|  | Pause |  | Pause / Step / Freeze |
|  | Stop |  | Stop / Hold |
|  | Title |  | Sound / Title |
|  | Menu |  | Menu / Home |
|  | Display |  | Display / Media |
|  | Search Mode |  | Red / Netflix / Search |
|  | Up |  | Up |
|  | Down |  | Down |
|  | Right |  | Right |
|  | Left |  | Left |
|  | Select |  | OK |
|  | Return |  | Back / Return |
|  | Zoom |  | Zoom / Size |
|  | Subtitle |  | Subtitle / EQ |



