 

 





 

 

 
 
 
 
 






 


 



 





**Originalfernbedienung    Ersatzfernbedienung**

	Standby		Power
	Status		Info
	SIS		Smart
	Favourite		Pre Ch
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0 / View Source		0
	0 / View Source		Play
	Record Source		Rec
	Decoder Source		Stop

**Originalfernbedienung    Ersatzfernbedienung**

	CH Up		Ch +
	CH Down		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Install		Red
	Auth		Green
	Cancel		Back
	Exit		Exit
	Timer		AV
	Tuning		Options
	Audio Mode		List
	FLIP		Yellow
	DPL / Custom		Blue
	Surround		Subt
	Mute		Mute
	Sound		Dual

