




 




Originalfernbedienung Ersatzfernbedienung

	Source		AV / Input / RDS
	?		Setup / OPT /
	Power		Power
	Format		Picture / Format
	Radio		TV/Radio /
	Mute / Edit		Mute / Dimmer
	Rec		Rec / Rec Mode
	> <		Zoom / Size
	Stop		Stop / Hold
	I<		I<< / Preset-
	Play / Pause		Play / Slow
	>		>> / Preset+
	<<		<< / Tune-
	>>		>> / Tune+
	Apps		Shift + Green / APP /
	List		Smart / List
	Exit		Exit / Cancel / Clear

Originalfernbedienung Ersatzfernbedienung

	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	i+		Info / Angle
	Back		Back / Return
	Red / A-Z		Red / Netflix / Search
	Green / Lang		Audio / Lang I/II
	Green / Lang		Green / APP / Repeat
	Yellow / S.Title		Yellow / YouTube / Repeat
	Blue / A.Focus		Blue / Prime Video / Random
	Vol +		Vol+
	Media		Display / Media
	CH + / Page +		CH+ / Page+
	Vol -		Vol-
	Guide		Guide / EPG / -/-





Originalfernbedienung Ersatzfernbedienung

	CH - / Page -		CH- / Page-
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Timer / DEL		Sleep / Timer
	0		0
	Menu		Menu / Home

Originalfernbedienung Ersatzfernbedienung

