 

 

 

 

 













 



 







 
 




Originalfernbedienung Ersatzfernbedienung

|   |             |   |                  |
|---|-------------|---|------------------|
|    | TV/SAT      |    | AV / Input / RDS |
|    | Standby     |    | Power            |
|    | 1           |    | 1                |
|    | 2           |    | 2                |
|    | 3           |    | 3                |
|    | 4           |    | 4                |
|    | 5           |    | 5                |
|    | 6           |    | 6                |
|    | 7           |    | 7                |
|    | 8           |    | 8                |
|   | 9           |   | 9                |
|  | ESC TXT     |  | Text / Goto      |
|  | 0 +/-       |  | 0                |
|  | Help        |  | D.Menu / Top     |
|  | Up          |  | Up               |
|  | Left / Vol- |  | Left             |
|  | Left / Vol- |  | Vol-             |

Originalfernbedienung Ersatzfernbedienung

|   |                       |   |                           |
|---|-----------------------|---|---------------------------|
|    | OK                    |    | OK                        |
|    | Menu                  |    | Menu / Home               |
|    | Right / Vol+          |    | Right                     |
|    | Right / Vol+          |    | Vol+                      |
|    | Down                  |    | Down                      |
|    | CH/Page-              |    | CH- / Page-               |
|    | CH/Page+              |    | CH+ / Page+               |
|    | List                  |    | Smart / List              |
|    | i                     |    | Info / Angle              |
|    | P.Guide               |    | Guide / EPG / -/--        |
|   | FAV                   |   | Fav / Marker / PC         |
|  | Mute                  |  | Mute / Dimmer             |
|  | Audio                 |  | Audio / Lang I/II         |
|  | Radio                 |  | TV/Radio /                |
|  | Zoom                  |  | Zoom / Size               |
|  | Red / Add / East      |  | Red / Netflix / Search    |
|  | Green / Lang / Locsat |  | Shift + Audio / Lang I/II |



