



 



 

 













 

 

 

 

 




 

 
 















**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	DTV/VCR		AV / Input / RDS
	Mute		Mute / Dimmer
	Info		Info / Angle
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Menu		Menu / Home
	EPG		Guide / EPG / -/--
	Exit		Exit / Cancel / Clear
	Up		Up
	CH+		CH+ / Page+
	Left		Left
	Vol-		Vol-
	OK		OK
	Right		Right
	Vol+		Vol+
	Rec List		Smart / List

 
**Originalfernbedienung Ersatzfernbedienung**

	CH-		CH- / Page-
	Down		Down
	Favorite		Fav / Marker / PC
	1		1
	2		2
	3		3
	Game		Display / Media
	4		4
	5		5
	6		6
	Recall		Back / Return
	7		7
	8		8
	9		9
	0		0
	Tv/Radio		TV/Radio /
	Audio		Audio / Lang I/II





Originalfernbedienung Ersatzfernbedienung

	Subtitle		Subtitle / EQ
	Text		Text / Goto
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Record		Rec / Rec Mode
	Stop		Stop / Hold
	<<		<< / Tune-
	>>		>> / Tune+

Originalfernbedienung Ersatzfernbedienung