 


 


 


 

 


 


 



 



 




 









 






 






**Originalfernbedienung Ersatzfernbedienung**

	CBL-SAT	 + 	Shift + TV/Radio / Program
	BD-DVD	 + 	Shift + 2
	Game	 + 	Shift + Green / APP /
	TV		TV/Radio /
	Bluetooth	 + 	Shift + 9
	AUX	 + 	Shift + 7
	Power		Power
	Source		AV / Input / RDS
	Menu		Menu / Home
	↑	 + 	Shift + Up
	Guide		Guide / EPG / -/--
	Up		Up
	Left		Left
	OK/Enter		OK
	Right		Right
	Info		Info / Angle
	Down		Down

 





 

 







 

 

 



 

 



 



**Originalfernbedienung Ersatzfernbedienung**

	Exit		Exit / Cancel / Clear
	↓	 + 	Shift + Down
	Vol+		Vol+
	DVR		Display / Media
	CH+		CH+ / Page+
	Vol-		Vol-
	Bass		Sound / Title
	CH-		CH- / Page-
	[ ]...		Audio / Lang I/II
	Mute		Mute / Dimmer
	Back		Back / Return
	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+
	I<		I<< / Preset-
	Pause		Pause / Step / Freeze
	I>		>>I / Preset+

 









Originalfernbedienung    Ersatzfernbedienung

	Rec		Rec / Rec Mode
	Stop		Stop / Hold
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	--		D.Menu / Top
	0		0
	CC		Subtitle / EQ
	(+)		Shift + OK
	≡		Setup / OPT /
	Red		Red / Netflix / Search

Originalfernbedienung    Ersatzfernbedienung

	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random

