


 






 

 

 


 


 
 
 
 
 
 
 

 







Originalfernbedienung Ersatzfernbedienung

	On / Off		Power
	Mute		Mute
	CD - DVD		Shift + 1
	FM - AM		Shift + 2
	TV		Shift + 3
	CBL - SAT		Shift + 4
	AUX		Shift + 5
	Up / Tune +		Up
	Down / Tune -		Down
	Left		Left
	Right		Right
	Enter		Ok
	Settings		Options
	System		Menu
	DVD Menu		D. Menu
	Guide		Guide
	Exit		Exit

Originalfernbedienung Ersatzfernbedienung

	Volume +		Vol +
	Volume -		Vol -
	Track/Chap./Preset /CH +		Ch +
	Track/Chap./Preset /CH -		Ch -
	Stop		Stop
	Pause		Pause
	Play		Play
	I<< Seek		I<<
	>>I Seek		>>I
	Shuffle		Eject
	Repeat		Text
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
7	7	7	7				
8	8	8	8				
9	9	9	9				
0	0	0	0				
Info	Info	DISPLAY INFO	Info				
Last	Last	FAV PRE-CH	Pre Ch				

