



Originalfernbedienung Ersatzfernbedienung

	POWER ON		Power
	POWER OFF	 + 	Shift + Power
	3D		3D
	INVERT		Text
	AUTO		Guide
	UP		Up
	ECO BLANK	 + 	Shift + 3D
	LEFT		Left
	OK		Ok
	RIGHT		Right
	DOWN		Down
	BACK		Back
	MENU		Menu
	SOURCE		AV
	MUTE		Mute
	VOL-		Vol -
	VOL+		Vol +

Originalfernbedienung Ersatzfernbedienung

	I<<		I<<
	PLAY		Play
	PAUSE		Pause
	>>I		>>I
	REW		<<
	STOP		Stop
	FWD		>>
	KEystone		0
	MODE		Pre Ch
	BRIGHT		1
	CONTRAST		4
	COLOR TEMP		3
	FINE TUNE		Dual
	GAMMA		5
	COLOR		2
	SHARP		6

