



**Originalfernbedienung    Ersatzfernbedienung**

	Power On		Power
	Power Off		Shift + Power
	3D		Zoom / Size
	PIP		Picture / Format
	Auto		Info / Angle
	Invert		Smart / List
	Swap		Fav / Marker / PC
	Eco Blank		Display / Media
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Back		Back / Return
	Menu		Menu / Home
	Source		AV / Input / RDS
	Mute		Mute / Dimmer

**Originalfernbedienung    Ersatzfernbedienung**

	Vol-		Vol-
	Vol+		Vol+
	I<<		I<< / Preset-
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	>>I		>>I / Preset+
	<<		<< / Tune-
	Stop		Stop / Hold
	>>		>> / Tune+
	Keystone		Setup / OPT /
	Mode		TV/Radio /
	Bright		Subtitle / EQ
	Contrast		Yellow / YouTube / Repeat
	Color Temp		Red / Netflix / Search
	Fine Tune		Blue / Prime Video / Random
	Gamma		Guide / EPG / -/-
	Color Manage		Green / APP / Repeat



