



Originalfernbedienung Ersatzfernbedienung

|   |            |   |                  |
|---|------------|---|------------------|
|    | Standby    |    | Power            |
|    | Source     |    | AV / Input / RDS |
|    | Home       |    | Shift + Menu /   |
|    | e          |    | D.Menu / Top     |
|    | Mouse      |    | Info / Angle     |
|    | TV / Radio |    | TV/Radio /       |
|    | 1          |    | 1                |
|    | 2          |    | 2                |
|    | 3          |    | 3                |
|    | 4          |    | 4                |
|   | 5          |   | 5                |
|  | 6          |  | 6                |
|  | 7          |  | 7                |
|  | 8          |  | 8                |
|  | 9          |  | 9                |
|  | Display    |  | Display / Media  |
|  | 0          |  | 0                |

Originalfernbedienung Ersatzfernbedienung

|   |              |   |                       |
|---|--------------|---|-----------------------|
|    | Recall       |    | Back / Return         |
|    | Recall       |    | Fav / Marker / PC     |
|    | Menu         |    | Menu / Home           |
|    | Exit         |    | Exit / Cancel / Clear |
|    | Up           |    | Up                    |
|    | Left         |    | Left                  |
|    | Enter        |    | OK                    |
|    | Right        |    | Right                 |
|    | Play / Pause |    | Play / Slow           |
|    | Play / Pause |    | Pause / Step / Freeze |
|   | Down         |   | Down                  |
|  | Stop         |  | Stop / Hold           |
|  | Vol +        |  | Vol+                  |
|  | TXT          |  | Text / Goto           |
|  | CH +         |  | CH+ / Page+           |
|  | Vol -        |  | Vol-                  |
|  | Mute         |  | Mute / Dimmer         |



