



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	10+	 + 	Shift + Guide
	Mute		Mute
	Title/TTX		Text
	Menu		Menu
	Open/Close		Eject
	Favorite		Pre Ch

Originalfernbedienung Ersatzfernbedienung

	Goto		Media
	EPG		Guide
	Info		Info
	Vol-		Vol -
	Vol+		Vol +
	Setup		Options
	Source		AV
	Tv/Radio		TV/R
	Return		Back
	Play		Play
	Pause		Pause
	Stop		Stop
	<<		<<
	>>		>>
	I<<		I<<
	>>I		>>I
	Subtitle		Subt



