



 














 

 

 
 
 

 

 
 

 
 
 

 
 
 







Originalfernbedienung Ersatzfernbedienung






 


	Standby		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	10+		Guide
	Prog		Shift + Sleep
	ALB+		Ch +
	ALB-		Ch -
	Tun+		Right

Originalfernbedienung Ersatzfernbedienung

	Tun-		Left
	Vol+		Vol +
	Vol-		Vol -
	Up		Up
	Down		Down
	>>/>>		>>
	<</ <<		<<
	Play		Play
	Pause		Pause
	CD		Smart
	USB		Media
	FM		TV/R
	Source		AV
	Intro		Ok
	Repeat		Text
	Random		3D
	Autostop		Stop





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	Sleep		Sleep				
	EQ		Pre Ch				
	Memory		Rec				
	STMono		Dual				

