



 

 
 

 








 

 

 

 

 

 
 
 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Menu		Menu
	Last		Back
	TV / R		TV/R
	Exit		Exit
	Up / CH +		Ch +

Originalfernbedienung Ersatzfernbedienung

	Up / CH +		Up
	Down / CH -		Ch -
	Down / CH -		Down
	Right / Vol +		Vol +
	Right / Vol +		Right
	Left / Vol -		Left
	Left / Vol -		Vol -
	OK		Ok
	Sub-T.		Subt
	Info		Info
	Text		Text
	Audio		Dual
	EPG		Guide
	Favor		Pre Ch
	Red / I<<		I<<
	Red / I<<		Red
	Green / <<		<<





Originalfernbedienung Ersatzfernbedienung

	Green / <<		Green
	Yellow / >>		>>
	Yellow / >>		Yellow
	Blue / >>I		Blue
	Blue / >>I		>>I
	USB		Media
	Rec / Goto		Rec
	Stop		Stop
	Play / Pause		Pause
	Play / Pause		Play

Originalfernbedienung Ersatzfernbedienung

