




 

 
 
 
 
 

 

 

 
 





 
 
 



 







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	FAV		Pre Ch
	Subtitle		Subt
	Info		Info
	TTX		Text
	Recall		Back
	List		List
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9

Originalfernbedienung Ersatzfernbedienung

	0		0
	Menu		Menu
	Exit		Exit
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	EPG		Guide
	Timer		AV
	Pg Dn		Media
	Pg Up		Smart
	Vol+		Vol +
	Vol-		Vol -
	<<		<<
	>>		>>
	I<<		I<<





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	>>I		>>I				
	CH+		Ch +				
	Ch-		Ch -				
	Play		Play				
	Pause		Pause				
	Stop		Stop				
	Audio		Dual				
	Rec		Rec				
	Sleep		Sleep				
	TV / Radio		TV/R				
	Aspect		Format				
	Red		Red				
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				

