



Originalfernbedienung    Ersatzfernbedienung

	Power		Power
	Eject		Eject
	Mute		Mute
	OSD / Info		Info
	V-Mode		Format
	P/N		Shift + TV/R
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	10+		Shift + Guide

Originalfernbedienung    Ersatzfernbedienung

	Goto		List
	Setup		Options
	EPG		Guide
	Exit		Exit
	Menu		Menu
	Text / Title		Text
	Subtitle		Subt
	Up / CH+		Up
	Up / CH+		Ch +
	Down / CH-		Down
	Down / CH-		Ch -
	Right / Vol+		Right
	Right / Vol+		Vol +
	Left / Vol-		Left
	Left / Vol-		Vol -
	Enter		Ok
	Red / Prog		Red



