



 


















Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Eject		Eject
	Mute		Mute
	OSD / Info		Info
	V-Mode		Smart
	P/N / Fav		Pre Ch
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	10+		Shift + Guide

Originalfernbedienung Ersatzfernbedienung

	Goto		Media
	Setup		Options
	Angle		Format
	Text / Title		Text
	Subtitle		Subt
	Menu		Menu
	Up		Up
	Left		Left
	Enter		Ok
	Right		Right
	Down		Down
	PBC / EPG		Guide
	Source		AV
	Exit		Exit
	<<		<<
	>>		>>
	Play / Pause		Play





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
Play / Pause	Pause	Vol-	Vol +
Stop	Stop		
I<<	I<<		
>>I	>>I		
Red / Prog	Red		
Red / Prog	Sleep		
Green / Step	Green		
Yellow / Repeat	Yellow		
Yellow / Repeat	Shift + Text		
Blue / A-B	Blue		
Zoom	Shift + Eject		
Slow	TV/R		
Vocal	Dual		
Audio	Shift + Dual		
CH-	Ch -		
CH+	Ch +		
Vol-	Vol -		

