

 
 

 

 
 
 
 


 



 








 

 

 



 

 

 



 
 
 
 
 

 

 
 

 









 



**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	[i]/Info		Info
	HDMI Control		Options
	Sleep		Sleep
	Screen		Format
	Source		AV
	Presets		3D
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Return		Back

**Originalfernbedienung    Ersatzfernbedienung**

	0		0
	Menu		Menu
	Red/Zoom		Red
	Green/Repeat		Green
	Yellow/Root		Yellow
	Blue/Title		Blue
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Ok/Selct		Ok
	P+		Ch +
	P-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	FAV		Pre Ch
	Lang		Dual





**Originalfernbedienung Ersatzfernbedienung**

	Subtitle		Subt
	Mute		Mute
	Swap		Smart
	EPG		Guide
	[ *]/[..]		D. Menu
	Text		Text
	C		Media
	Display		Shift + Info
	Angle		Eject
	Search Mode		TV/R
	Rec		Rec
	Stop		Stop
	Play		Play
	Pause		Pause
	<<		<<
	>>		>>
	I<<		I<<

**Originalfernbedienung Ersatzfernbedienung**

	>>I		>>I

