



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Tv / Radio		TV/R
	← PR		Back
	EPG		Guide
	Menu		Menu
	Up / PR +		Up

Originalfernbedienung Ersatzfernbedienung

	Up / PR +		Ch +
	Down / PR -		Ch -
	Down / PR -		Down
	Right / Vol +		Vol +
	Right / Vol +		Right
	Left / Vol -		Vol -
	Left / Vol -		Left
	OK / List		Ok
	FAV		Pre Ch
	Exit		Exit
	Red / Find		Red
	Yellow / TXT/Subt.		Subt
	Yellow / TXT/Subt.		Text
	Yellow / TXT/Subt.		Yellow
	Green / V-Format		Green
	Blue / Audio L/R		Blue
	Blue / Audio L/R		Dual



