




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Menu		Menu
	Exit		Exit
	Up / CH+		Up
	Up / CH+		Ch +
	Down / CH-		Down

Originalfernbedienung Ersatzfernbedienung

	Down / CH-		Ch -
	Right / Vol+		Right
	Right / Vol+		Vol +
	Left / Vol-		Left
	Left / Vol-		Vol -
	OK / Store		Ok
	P-		Shift + Ch -
	P+		Shift + Ch +
	EPG		Guide
	Back		Back
	i		Info
	Subtitle		Subt
	Text		Text
	Aspect		Format
	Picture		Shift + Format
	Audio		Dual
	Sleep		Sleep





Originalfernbedienung	Ersatzfernbedienung
-----------------------	---------------------

	Red / TV/Radio		Red
	Red / TV/Radio		TV/R
	Green / FAV		Green
	Green / FAV		Pre Ch
	Yellow / List		Yellow
	Yellow / List		List
	Blue / +/-		Blue
	All CH		Smart
	White / ?		Options

Originalfernbedienung	Ersatzfernbedienung
-----------------------	---------------------

