

 




 


 
 
 










 



 











| Originalfernbedienung | Ersatzfernbedienung | Originalfernbedienung | Ersatzfernbedienung |
|-----------------------|--|-----------------------|--|
| PWR On/Off |  Power | CH/Page- |  Ch - |
| Mute |  Mute | 1. ? |  1 |
| Info |  Shift + Info | 2abc |  2 |
| TV |  TV/R | 3def |  3 |
| Video |  D. Menu | 4ghi |  4 |
| Text |  Text | 5jkl |  5 |
| Menu |  Menu | 6mno |  6 |
| Menu Up |  Up | 7pqrm |  7 |
| Display |  Info | 8tuv |  8 |
| Menu Left |  Left | 9wxyz |  9 |
| OK Enter |  Ok | Guide Pilote |  Guide |
| Menu Right |  Right | 0/10 |  0 |
| Menu Down |  Down | FAV Pref. |  Pre Ch |
| Back |  Back | Red |  Red |
| Volume+ |  Vol + | Green |  Green |
| CH/Page+ |  Ch + | Yellow |  Yellow |
| Volume- |  Vol - | Blue |  Blue |



Originalfernbedienung Ersatzfernbedienung Originalfernbedienung Ersatzfernbedienung

| | | |
|---------------|---|------|
| East |  | Rec |
| Freeze |  | Stop |
| Lang./Rewind |  | << |
| H/V Play |  | Play |
| LNB F.Forward |  | >> |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |

| | |
|--|--|
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

