 











 















 








Originalfernbedienung Ersatzfernbedienung

	Stop		Stop / Hold
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0/AV		0
	CH/TR-		CH- / Page-
	CH/TR+		CH+ / Page+
	Rec/OTR		Rec / Rec Mode
	Play/Slow		Play / Slow
	Up		Up

Originalfernbedienung Ersatzfernbedienung

	Pause/Still		Pause / Step / Freeze
	<<		<< / Tune-
	Left		Left
	>>		>> / Tune+
	Right		Right
	Down		Down
	Enter		OK
	Index		D.Menu / Top
	Cancel		Exit / Cancel / Clear
	Menu		Menu / Home
	Time Rec		Sleep / Timer
	Program		Shift + TV/Radio / Program
	Call		Sound / Title
	Clock/Counter		Shift + Sleep / Timer
	Counter Reset		Setup / OPT /
	Zero/Return		Shift + 0
	Speed SP/LP		Picture / Format





Originalfernbedienung Ersatzfernbedienung

TV/VCR	TV/VCR	PROGRAM TV/RADIO	TV/Radio /
AUDIO SELECT	Audio Select	LANG I/II	Audio / Lang I/II
EJECT	Eject	SURROUND	Eject / Surround

Originalfernbedienung Ersatzfernbedienung

