 

 

 

 
 
 

 









 
 
 
 
 
 
 
 
 
 
 
 
 
 




Originalfernbedienung    Ersatzfernbedienung

	Power		Power
	Input		AV
	USB/My Media		Media
	Mute		Mute
	Blank		Smart
	Ratio		Format
	Page Up		Ch +
	Page Down		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Menu		Menu
	Auto		0
	Q.Menu		D. Menu
	Mark		Exit
	Still		Info
	Back		Back
	Play/Pause		Play

Originalfernbedienung    Ersatzfernbedienung

	Play/Pause		Pause
	Stop		Stop
	>>I		>>I
	I<<		I<<
	Key.S Up		>>
	Key.S Down		<<
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	OK		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left

