

 











 


























Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Info		Info / Angle
	0		0
	Source		AV / Input / RDS
	Home		Menu / Home
	Up		Up
	Menu		D.Menu / Top

Originalfernbedienung Ersatzfernbedienung

	Left		Left
	OK		OK
	Right		Right
	Back		Back / Return
	Down		Down
	Exit		Exit / Cancel / Clear
	Netflix	 + 	Shift + Red / Netflix /
	prime video	 + 	Shift + Blue / Prime
	YouTube	 + 	Shift + Yellow / YouTube /
	Google Play		Zoom / Size
	Vol+		Vol+
	Text		Text / Goto
	P+		CH+ / Page+
	Vol-		Vol-
	Colors		Smart / List
	P-		CH- / Page-
	Guide		Guide / EPG / -/-



