




 

 

 





 

 





 

 












 
 
 










 





 

 

 
 







Originalfernbedienung    Ersatzfernbedienung

	POWER		Power
	SOURCE		AV
	EXIT		Exit
	MENU		Menu
	AUDIO		Dual
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	FAV		Pre Ch
	MUTE		Mute

Originalfernbedienung    Ersatzfernbedienung

	PIC MODE		Shift + Format
	TEXT		Text
	TV / RADIO		TV/R
	OK		Ok
	UP / CH+		Up
	DOWN / CH-		Down
	RIGHT		Right
	LEFT		Left
	PAGE UP		Ch +
	PAGE DOWN		Ch -
	VOL+		Vol +
	VOL-		Vol -
	SLEEP		Sleep
	SUB.		Subt
	RECALL		Back
	RED		Red
	GREEN		Green



