 
 
 
















 



 





 



 





 




Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------|---|-------|
|  | Power |  | Power |
|  | TV |  | TV/R |
|  | Up |  | Up |
|  | Left |  | Left |
|  | OK |  | Ok |
|  | Right |  | Right |
|  | Down |  | Down |
|  | Retoru |  | Back |
|  | Sortie |  | Exit |
|  | Menu |  | Menu |
|  | V+ |  | Vol + |
|  | V- |  | Vol - |
|  | Zoom |  | Eject |
|  | Mute |  | Mute |
|  | P+ |  | Ch + |
|  | P- |  | Ch - |
|  | 0 |  | 0 |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|------|---|------|
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | << |  | << |
|  | > |  | Play |
|  | >> |  | >> |
|  | Stop |  | Stop |
|  | Rec |  | Rec |
| | | | |
| | | | |
| | | | |

