



 
 




 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	[≡i]/Info		Info
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	[≡?]/Source		AV
	O)/II/Audio		Dual
	*		Options
	Menu		Menu

Originalfernbedienung Ersatzfernbedienung

	Exit		Exit
	♪		Shift + Dual
	Enter		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	CH+		Ch +
	CH-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	[≡♦]/[+]		Format
	List		List
	EPG		Guide
	Recall		Pre Ch
	[≡]		Text
	Play		Play





Originalfernbedienung Ersatzfernbedienung

	Pause		Pause
	[≡+]/Still		3D
	Stop		Stop
	[≡o]/Subtitle		Subt
	Radio		TV/R
	Sleep		Sleep
	FAV-		Shift + Ch -
	FAV+		Shift + Ch +
	Red		Red
	<<		<<
	Green		Green
	>>		>>
	I<<		I<<
	Yellow		Yellow
	Blue		Blue
	>>I		>>I
	[≡x]/Repeat		D. Menu

Originalfernbedienung Ersatzfernbedienung

