










 


 







 








 







 

 





 
 
 



 

 

 
 


 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	Play		Play / Slow
	[≡]		Text / Goto
	Pause / [≡]		Pause / Step / Freeze
	Stop / [≡+]		Stop / Hold
	Rec / [≡◀]		Rec / Rec Mode
	<< / [≡]		<< / Tune-
	<< / [≡]		<< / Preset-
	>> / [≡]		>> / Preset+
	>> / [≡]		>> / Tune+
	P. Mode		Picture / Format
	S. Mode		Sound / Title
	ANT		D. Menu / Top
	Tools		Set up / OPT /
	1		1
	2		2

Originalfernbedienung Ersatzfernbedienung

	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Menu		Menu / Home
	0		0
	Exit		Exit / Cancel / Clear
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Back		Back / Return
	Home/ Source		Shift + Menu / Home



