





 



 

 
 
 








 









Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	Play		Play
	[≡]		Text
	Pause/[/≡]		Pause
	Stop/[≡+]		Stop
	Rec/[≡◇]		Rec
	<</[≡o]		<<
	<</[≡i]		<<
	>> /[≡?]		>>
	>> /[≡x]		>>
	Info		Info
	EPG		Guide
	Subtitle		Subt
	Audio		Dual
	1		1
	2		2

Originalfernbedienung Ersatzfernbedienung

	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Menu		Menu
	Exit		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Back		Back
	Source		AV



