


 







 



 

 



 

 





 




 

 




Originalfernbedienung Ersatzfernbedienung

|   |          |   |                  |
|---|----------|---|------------------|
|    | Power    |    | Power            |
|    | Mute     |    | Mute / Dimmer    |
|    | 1        |    | 1                |
|    | 2        |    | 2                |
|    | 3        |    | 3                |
|    | 4        |    | 4                |
|    | 5        |    | 5                |
|    | 6        |    | 6                |
|    | 7        |    | 7                |
|    | 8        |    | 8                |
|   | 9        |   | 9                |
|  | CH.List  |  | Smart / List     |
|  | 0        |  | 0                |
|  | Recall   |  | Back / Return    |
|  | Vol+     |  | Vol+             |
|  | PIC.Mode |  | Picture / Format |
|  | S.Mode   |  | Sound / Title    |











 











 

 

 

 

 



Originalfernbedienung Ersatzfernbedienung

|   |           |   |                        |
|---|-----------|---|------------------------|
|    | CH+       |    | CH+ / Page+            |
|    | Vol-      |    | Vol-                   |
|    | Source    |    | AV / Input / RDS       |
|    | CH-       |    | CH- / Page-            |
|    | Up        |    | Up                     |
|    | Left      |    | Left                   |
|    | OK        |    | OK                     |
|    | Right     |    | Right                  |
|    | Exit      |    | Exit / Cancel / Clear  |
|    | Down      |    | Down                   |
|   | Menu      |   | Menu / Home            |
|  | Rec       |  | Rec / Rec Mode         |
|  | Timeshift |  | Shift + Pause / Step / |
|  | Timer     |  | Shift + Sleep / Timer  |
|  | Rec.List  |  | Shift + Smart / List   |
|  | Red       |  | Red / Netflix / Search |
|  | Green     |  | Green / APP / Repeat   |



 









Originalfernbedienung Ersatzfernbedienung

|   |          |   |                             |
|---|----------|---|-----------------------------|
|    | Yellow   |    | Yellow / YouTube / Repeat   |
|    | Blue     |    | Blue / Prime Video / Random |
|    | Aspect   |    | Shift + Picture / Format    |
|    | Tv/Radio |    | TV/Radio /                  |
|    | Sleep    |    | Sleep / Timer               |
|    | Subtitle |    | Subtitle / EQ               |
|    | Index    |    | Info / Angle                |
|    | Reveal   |    | D.Menu / Top                |
|    | Audio    |    | Audio / Lang I/II           |
|    | Display  |    | Display / Media             |
|   | Text     |   | Text / Goto                 |
|  | Size     |  | Zoom / Size                 |
|  | Play     |  | Play / Slow                 |
|  | Pause    |  | Pause / Step / Freeze       |
|  | Subpage  |  | Setup / OPT /               |
|  | Stop     |  | Stop / Hold                 |
|  | Hold     |  | Shift + Stop / Hold         |

Originalfernbedienung Ersatzfernbedienung

|   |     |   |               |
|---|-----|---|---------------|
|  | I<< |  | I<< / Preset- |
|  | >>I |  | >>I / Preset+ |
|  | <<  |  | << / Tune-    |
|  | >>  |  | >> / Tune+    |

