



Originalfernbedienung Ersatzfernbedienung

|   |         |   |                  |
|---|---------|---|------------------|
|    | Power   |    | Power            |
|    | Mute    |    | Mute / Dimmer    |
|    | 1       |    | 1                |
|    | 2       |    | 2                |
|    | 3       |    | 3                |
|    | 4       |    | 4                |
|    | 5       |    | 5                |
|    | 6       |    | 6                |
|    | 7       |    | 7                |
|    | 8       |    | 8                |
|  | 9       |  | 9                |
|  | 0       |  | 0                |
|  | DTV/ATV |  | D.Menu / Top     |
|  | Recall  |  | Back / Return    |
|  | P.Mode  |  | Picture / Format |
|  | S.Mode  |  | Sound / Title    |
|  | Sleep   |  | Sleep / Timer    |

Originalfernbedienung Ersatzfernbedienung

|   |          |   |                       |
|---|----------|---|-----------------------|
|    | Menu     |    | Menu / Home           |
|    | Source   |    | AV / Input / RDS      |
|    | Up       |    | Up                    |
|    | Left     |    | Left                  |
|    | Enter    |    | OK                    |
|    | Right    |    | Right                 |
|    | Down     |    | Down                  |
|    | Exit     |    | Exit / Cancel / Clear |
|    | Display  |    | Display / Media       |
|    | Vol+     |    | Vol+                  |
|  | Vol-     |  | Vol-                  |
|  | MTS      |  | Info / Angle          |
|  | Rec List |  | Smart / List          |
|  | CH+      |  | CH+ / Page+           |
|  | CH-      |  | CH- / Page-           |
|  | FAV/List |  | Fav / Marker / PC     |
|  | Rec      |  | Rec / Rec Mode        |







**Originalfernbedienung    Ersatzfernbedienung**

|   |         |   |                  |
|---|---------|---|------------------|
|    | Power   |    | Power            |
|    | Mute    |    | Mute / Dimmer    |
|    | 1       |    | 1                |
|    | 2       |    | 2                |
|    | 3       |    | 3                |
|    | 4       |    | 4                |
|    | 5       |    | 5                |
|    | 6       |    | 6                |
|    | 7       |    | 7                |
|    | 8       |    | 8                |
|  | 9       |  | 9                |
|  | 0       |  | 0                |
|  | DTV/ATV |  | D.Menu / Top     |
|  | Recall  |  | Back / Return    |
|  | P.Mode  |  | Picture / Format |
|  | S.Mode  |  | Sound / Title    |
|  | Sleep   |  | Sleep / Timer    |

**Originalfernbedienung    Ersatzfernbedienung**

|   |          |   |                       |
|---|----------|---|-----------------------|
|    | Menu     |    | Menu / Home           |
|    | Source   |    | AV / Input / RDS      |
|    | Up       |    | Up                    |
|    | Left     |    | Left                  |
|    | Enter    |    | OK                    |
|    | Right    |    | Right                 |
|    | Down     |    | Down                  |
|    | Exit     |    | Exit / Cancel / Clear |
|    | Display  |    | Display / Media       |
|    | Vol+     |    | Vol+                  |
|  | Vol-     |  | Vol-                  |
|  | MTS      |  | Info / Angle          |
|  | Rec List |  | Smart / List          |
|  | CH+      |  | CH+ / Page+           |
|  | CH-      |  | CH- / Page-           |
|  | FAV/List |  | Fav / Marker / PC     |
|  | Rec      |  | Rec / Rec Mode        |



