
 
 
 

 
 
 


 
 
 
 

 
 
 
 
 
 
 

 
 






 




Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	Mute		Mute
	Rotate		Back
	Repeat		Text
	Subtitle		Subt
	Video Out		AV
	Display		Shift + Info
	Zoom		Eject
	Audio		Dual
	Digest Photo		Sleep
	Mode Photo		List
	Slide Time		Options
	Photo-Music		Pre Ch
	Setup		Menu
	Home		Smart
	i		Info
	Up		Up

Originalfernbedienung Ersatzfernbedienung

	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Play		Play
	Pause		Pause
	Stop		Stop
	Device		Media
	Backlight		3D
	4:3/16:9		Format
	Vol+		Vol +
	Vol-		Vol -
	1		1
	2		2
	3		3
	4		4
	5		5





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	6		6				
	7		7				
	8		8				
	9		9				
	0		0				
	+10		Guide				
	Time Search		TV/R				
	<< Skip		<<				
	Skip >>		>>				
	I<</Prev		I<<				
	>>/Next		>>I				
	Movie		Red				
	Music		Green				
	Photo		Yellow				
	File		Blue				

