


 








Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-------------|---|---------------|
|  | Power |  | Power |
|  | Mute |  | Mute |
|  | Rec |  | Rec |
|  | Browser |  | Media |
|  | Timer |  | Shift + AV |
|  | Copy |  | Green |
|  | Guide |  | Guide |
|  | AV / TV |  | AV |
|  | Teletext |  | Text |
|  | EPG |  | Shift + Guide |
|  | Record List |  | List |
|  | Vol- |  | Vol - |
|  | Vol+ |  | Vol + |
|  | Up / CH+ |  | Ch + |
|  | Up / CH+ |  | Up |
|  | Down / CH- |  | Ch - |
|  | Down / CH- |  | Down |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-----------|---|-------|
|  | Left |  | Left |
|  | Enter |  | Ok |
|  | Right |  | Right |
|  | Return |  | Back |
|  | Setup |  | Menu |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | Go To |  | Smart |
|  | TV System |  | TV/R |



