












 

 




 


 



 





 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	AV		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0 / 10		0
	- / - / +10		Guide
	Recall		Pre Ch
	Reveal		Format
	Size		Eject
	Mix		Shift + Text

Originalfernbedienung Ersatzfernbedienung

	Cancel		Exit
	Timer		Shift + AV
	Index		Info
	Text		Text
	Sleep		Sleep
	Status		Smart
	Mute		Mute
	Red / OK		Red
	Red / OK		Ok
	Green / P.P		Green
	Yellow / ANA		Yellow
	Blue		Blue
	Up / P+		Up
	Up / P+		Ch +
	Down / P-		Down
	Down / P-		Ch -
	Left / V-		Left





Originalfernbedienung Ersatzfernbedienung

	Left / V-		Vol -
	Right / V+		Right
	Right / V+		Vol +
	Menu		Menu

Originalfernbedienung Ersatzfernbedienung





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Eject		Eject
	1		1
	2		2
	3		3
	7		7
	8		8
	9		9
	0/10		0
	-/- / +10		Guide
	Angle		Format
	Zoom		Shift + Eject
	Program		Sleep
	Memory		Pre Ch
	Up		Up
	Left		Left
	Right		Right

Originalfernbedienung Ersatzfernbedienung

	Down		Down
	Setup		Options
	Enter		Ok
	Return		Back
	Slow		Shift + Play
	Step		Shift + Pause
	Sub-T		Subt
	Clear		Exit
	Chann		Media
	A-Time		Text
	I<<		I<<
	>>I		>>I
	Play		Play
	Pause		Pause
	<<		<<
	>>		>>
	Stop		Stop

