



 

 
















 


 





 
 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Stop		Stop / Hold
	Play/Pause		Play / Slow
	<<		<< / Tune-
	>>		>> / Tune+
	Rec		Rec / Rec Mode
	Audio		Audio / Lang I/II
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	Red / TTX		Red / Netflix / Search
	Red / TTX		Text / Goto
	Green / SUB		Green / APP / Repeat
	Green / SUB		Subtitle / EQ
	Yellow / Sleep		Yellow / YouTube / Repeat
	Yellow / Sleep		Sleep / Timer
	Blue / Timer		Blue / Prime Video / Random
	Blue / Timer		Shift + Sleep / Timer

Originalfernbedienung Ersatzfernbedienung

	Menu		Menu / Home
	Info		Info / Angle
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Exit		Exit / Cancel / Clear
	Down		Down
	Back		Back / Return
	Vol+		Vol+
	EPG		Guide / EPG / -/-
	CH+		CH+ / Page+
	Vol-		Vol-
	List		Smart / List
	CH-		CH- / Page-
	1		1
	2		2





Originalfernbedienung Ersatzfernbedienung

3	3	CD - STB 3	3
4	4	VIDEO 4	4
5	5	TAPE 5	5
6	6	TUNER 6	6
7	7	AUX - HDD 7	7
8	8	USB 8	8
9	9	BLUETOOTH 9	9
TV-RADIO	TV-Radio	PROGRAM TV/ RADIO	TV/Radio /
0	0	HDMI - BAT 0	0
FAV	Fav	PC FAV MARKER	Fav / Marker / PC

Originalfernbedienung Ersatzfernbedienung

