

 

 



 

 





 

 



 

 





 

 





Originalfernbedienung Ersatzfernbedienung


 

	Power		Power
	DTV		Shift + TV/Radio / Program
	TV		TV/Radio /
	AV		AV / Input / RDS
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Text		Text / Goto
	0		0
	PRE-CH		Back / Return
	Red		Red / Netflix / Search

Originalfernbedienung Ersatzfernbedienung

	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Vol+		Vol+
	i		Info / Angle
	CH+		CH+ / Page+
	Vol-		Vol-
	Mute		Mute / Dimmer
	CH-		CH- / Page-
	EPG		Guide / EPG / -/--
	Option		Setup / OPT /
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Menu		Menu / Home




Originalfernbedienung Ersatzfernbedienung

	Exit		Exit / Cancel / Clear
	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+
	Rec		Rec / Rec Mode
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	File List/[≐]		Smart / List
	Bookmark/[.,≐]		Display / Media
	Repeat/[≐0]		Shift + Green / APP / REPEAT
	A<>B/[≐?]		Shift + Yellow / YouTube / REPEAT A-B
	PIC Size		Zoom / Size
	PIC Mode		Picture / Format
	SND Mode		Sleep / Timer
	M/S		D.Menu / Top

Originalfernbedienung Ersatzfernbedienung

