



 

 











 

 

 



 





 




 



 



 



 





 




 

 



 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	I<<		I<< / Preset-
	Eject		Eject / Surround
	<<		<< / Tune-
	>>		>> / Tune+
	>>I		>>I / Preset+
	Play/Pause		Play / Slow
	TV/TXT /		Text / Goto
	TV/TXT /		Audio / Lang I/II
	Cancel / Zoom		Shift + Exit / Cancel / Clear
	Cancel / Zoom		Shift + Zoom / Zoom /
	Reveal / Subtitle		Shift + Subtitle / EQ
	Stop		Stop / Hold
	Hold / Menu		D.Menu / Top
	Hold / Menu		Shift + Stop /
	Size / Angle		Shift + Info / Angle
	Subpage / Title		Shift + Sound / Title



 

 

 

 

 








 


 



 







Originalfernbedienung Ersatzfernbedienung

	Index / Goto		Shift + Text /
	Red/Program		Red / Netflix / Search
	Red/Program		TV/Radio /
	Green/Slow		Green / APP / Repeat
	Green/Slow		Shift + Play /
	Yellow/Repeat		Yellow / YouTube / Repeat
	Yellow/Repeat		Shift + Green / APP /
	Blue/A-B		Blue / Prime Video / Random
	Blue/A-B		Shift + Yellow / YouTube /
	CH+		CH+ / Page+
	TV Menu		Menu / Home
	Vol+		Vol+
	CH-		CH- / Page-
	Source		AV / Input / RDS
	Vol-		Vol-
	DTV		Shift + 1
	DVD Setup		Setup / OPT /



















 
 


 







 

 





Originalfernbedienung Ersatzfernbedienung

	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Exit		Exit / Cancel / Clear
	Display		Display / Media
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	-/--		Shift + Guide / EPG / -/--

Originalfernbedienung Ersatzfernbedienung

	0		0
	Recall		Back / Return
	Picture		Picture / Format
	Sound		Sound / Title
	I/II		Shift + Audio / Lang I/II
	Mute		Mute / Dimmer
	Sleep		Sleep / Timer
	Info		Info / Angle
	Zoom		Zoom / Size
	Freeze		Pause / Step / Freeze
	EPG		Guide / EPG / -/--
	FAV List		Smart / List
	FAV ADD		Fav / Marker / PC
	FAV >>I		Shift + Right
	Subtitle		Subtitle / EQ
	Time		Shift + Sleep / Timer
	Quick Start		Shift + Smart / List

