



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Input		AV / Input / RDS
	TV / TXT		Shift + Text /
	Cancel		Shift + Exit / Cancel / Clear
	Reveal		Setup / OPT /
	Nicam/A2		Shift + Sound / Title
	Hold		Stop / Hold
	Size		Shift + Zoom /
	Subpage		Eject / Surround
	Index		Smart / List
	Red / TV/Radio		Red / Netflix / Search
	Red / TV/Radio		TV/Radio /
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	CH+		CH+ / Page+
	Vol+		Vol+

Originalfernbedienung Ersatzfernbedienung

	CH-		CH- / Page-
	Vol-		Vol-
	Menu		Menu / Home
	Mute		Mute / Dimmer
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	DVB		D.Menu / Top
	Exit		Exit / Cancel / Clear
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6



