 









 











 






 





**Originalfernbedienung    Ersatzfernbedienung**

	Standby		Power
	Mute		Mute / Dimmer
	EPG		Guide / EPG / -/--
	Info		Info / Angle
	TTX		Text / Goto
	Audio		Audio / Lang I/II
	DTV/VCR		Smart / List
	Subtitle		Subtitle / EQ
	Menu		Menu / Home
	UP		Up
	Down		Down
	Right		Right
	Left		Left
	OK		OK
	CH+		CH+ / Page+
	CH-		CH- / Page-
	Exit		Exit / Cancel / Clear







 

 



 

 
 
 
 
 

 

**Originalfernbedienung    Ersatzfernbedienung**

	Vol-		Vol-
	Vol+		Vol+
	Favourite		Fav / Marker / PC
	Tv/Radio		TV/Radio /
	1		1
	2		2
	3		3
	Recall		Back / Return
	4		4
	5		5
	6		6
	Goto		Shift + Text /
	7		7
	8		8
	9		9
	0		0
	<<		<< / Tune-





Originalfernbedienung Ersatzfernbedienung

	>>		>> / Tune+
	<<		<< / Preset-
	>>		>>  / Preset+
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	Repeat		Shift + Green / APP / REPEAT
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random

Originalfernbedienung Ersatzfernbedienung